

SAFETY INSTRUCTIONS

A WARNING **A**

This goal should be securely anchored at all times
 This goal is not to be stored or used on a slope or hill area
 Check that all fastenings are fully tightened before using this product
 Check fastenings periodically after using goal
 Goal shall be secured against overturning at all times
 Do not climb on net or framework
 This goal is designed to be used for soccer only

Z300SGWARN





"Meets Safety and Performance Specification" ASTM F2950-14

Z300F2950

Z300NEVERX

Z300ANCHOR

These WARNING LABELS have been affixed to your goals prior to shipment.

Our labels are laminated with an ultraviolet protective layer to protect from fading. However, after years of exposure, they may fade.

Should they become illegible or be removed from your goal, you may obtain free replacements by calling BSN Sports at 1-800-527-7510.

Please request labels by part number listed under each label above.

- Check for structural integrity and proper connecting hardware before every use. Replace damaged or missing parts or fasteners immediately.
- Safety/Warning labels must be clearly visible.
- Securely anchor moveable soccer goals at ALL times.
- Always instruct players, managers, coaches, trainers, teachers, maintenance workers and all other personnel who might come in contact with goal, on the safe handling of and potential dangers associated with moveable soccer goals.
- Always exercise extreme caution when moving goals and provide adequate manpower to move goals of varied sizes and weights. Moveable soccer goals should only be moved by authorized personnel.
- NEVER allow anyone to climb on the net or goal framework.
- Moveable soccer goals should only be used on LEVEL fields, NEVER on a slope or hill area.
- Remove nets when goals are not in use.
- Most of the tip-over injuries occured when goals were unattended. Anchor
 or chain one goal to another or to nearby fence posts, dugouts, or any other
 similar sturdy fixture when not in use. If this is not practical, store moveable
 soccer goals in a place where children cannot have access to them.
- Fully disassemble goals for seasonal storage.

PAGE 8 REV. 4/15




GUIDELINES FOR GOAL STORAGE OR SECURING WHEN GOAL IS NOT IN USE

THE MAJORITY OF SOCCER GOAL ACCIDENTS INVESTIGATED BY CONSUMER PRODUCT SAFETY COMMISSION DID NOT OCCUR DURING A SOCCER MATCH.

MOST INCIDENTS OCCURRED WHEN GOALS WERE UNATTENDED.

ALWAYS STORE GOALS PROPERLY WHEN NOT IN USE.

BSN SPORTS IS A MEMBER OF THE COALITION TO PROMOTE SOCCER GOAL SAFETY.

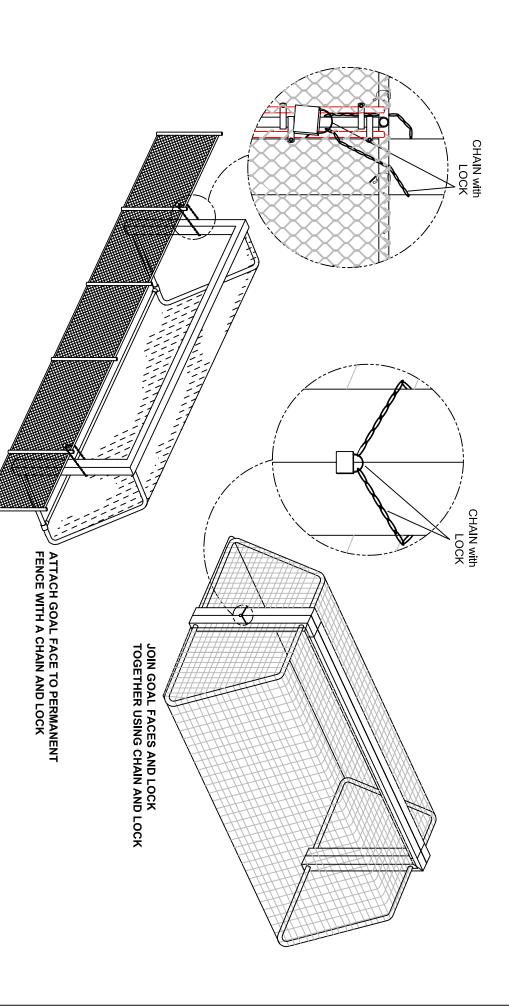



CRESSIETY Alert


Movable Soccer Goals Can Fall Over On Children

Movable soccer goals can fall over and kill or injure children who climb on them or hang from the crossbar. The U.S. Consumer Product Safety Commission (CPSC) has reports of at least 36 deaths since 1979 resulting from soccer goals falling over. Both homemade and professionally manufactured soccer goals are involved in these incidents.

To help prevent deaths and injuries associated with soccer goals, follow these safety suggestions.

- Securely anchor or counter-weight movable soccer goals at all times (see illustration).
- Never climb on the soccer net or goal framework.
- Always instruct soccer players on the safe handling of and potential dangers associated with movable soccer goals.
- Use movable soccer goals only on level (flat) fields.
- Check all connecting hardware before every use. Replace damaged or missing fasteners immediately.
- Ensure safety labels are clearly visible.
- Remove nets when goals are not in use.
- Anchor or chain goals to nearby fence posts, dugouts or similar sturdy fixtures when not in use.
- Fully disassemble goals for seasonal storage.

A voluntary safety standard for soccer goals and a guide for safer use are available from ASTM International at www.ASTM.org.

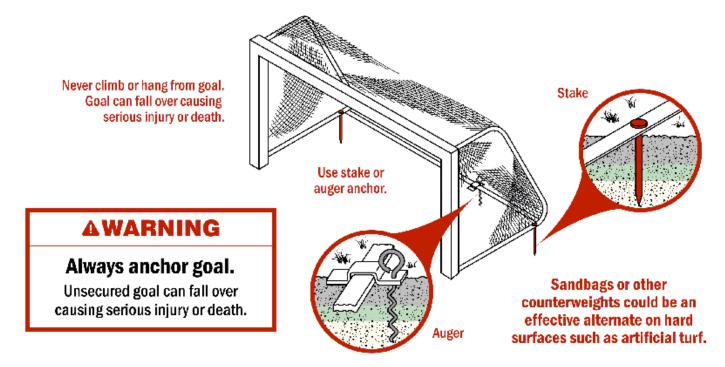

Publication 5118 072014