


### INSTALLING 36" GROUND SLEEVE

1. Dig hole. It is recommended that you dig a hole that is 24" diameter and 42" deep. Local soil conditions may vary. Please consult your local contractor.
2. Plumb Ground Sleeve and concrete in place. (Be sure to pour concrete 3" below ground level. This will allow room to tighten the set screws. Allow concrete to dry for 72 hours.)

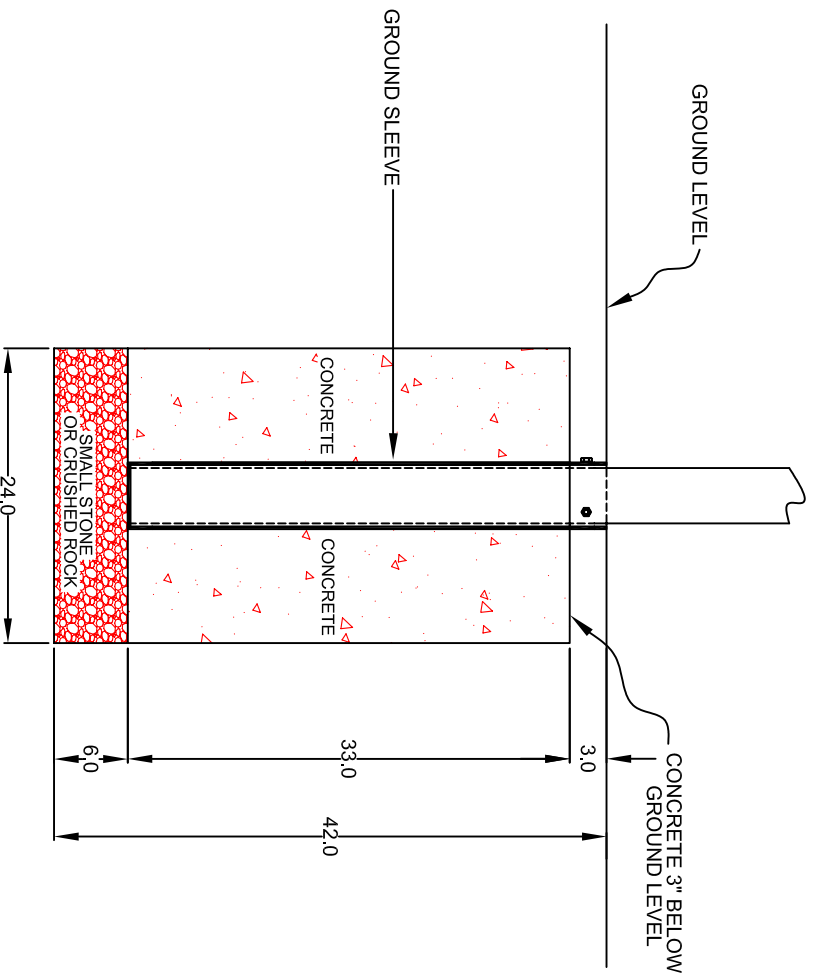

1255287, 1255294

### INSTALLING 48" GROUND SLEEVE

1. Dig hole. It is recommended that you dig a hole that is 24" diameter and 54" deep. Local soil conditions may vary. Please consult your local contractor.
2. Plumb Ground Sleeve and concrete in place. (Be sure to pour concrete 3" below ground level. This will allow room to tighten the set screws. Allow concrete to dry for 72 hours.)

