


TOOL REQUIRED:

2 EA 3/4" BOX WRENCH OR
2 EA ADJUSTABLE WRENCH
1 EA RUBBER MALLET

ASSEMBLY INSTRUCTIONS:

1. REMOVE END CAP FROM BASE LEG.
2. ORIENT WHEEL BRACKET (4) SO THAT THE TAPERED END INSERTS DIAGONALLY INTO THE BASELEG OPENING AND THE BRACKET IS POINTED AWAY FROM THE FRAME. USING THE RUBBER MALLET, GENTLY TAP THE WHEEL BRACKET UNTIL IT IS FULLY INSERTED INTO THE BASE LEG.
3. ATTACH THE WHEELS (5) USING THE HARDWARE PROVIDED. TIGHTEN FIRMLY BUT WHEELS MUST SPIN FREELY.

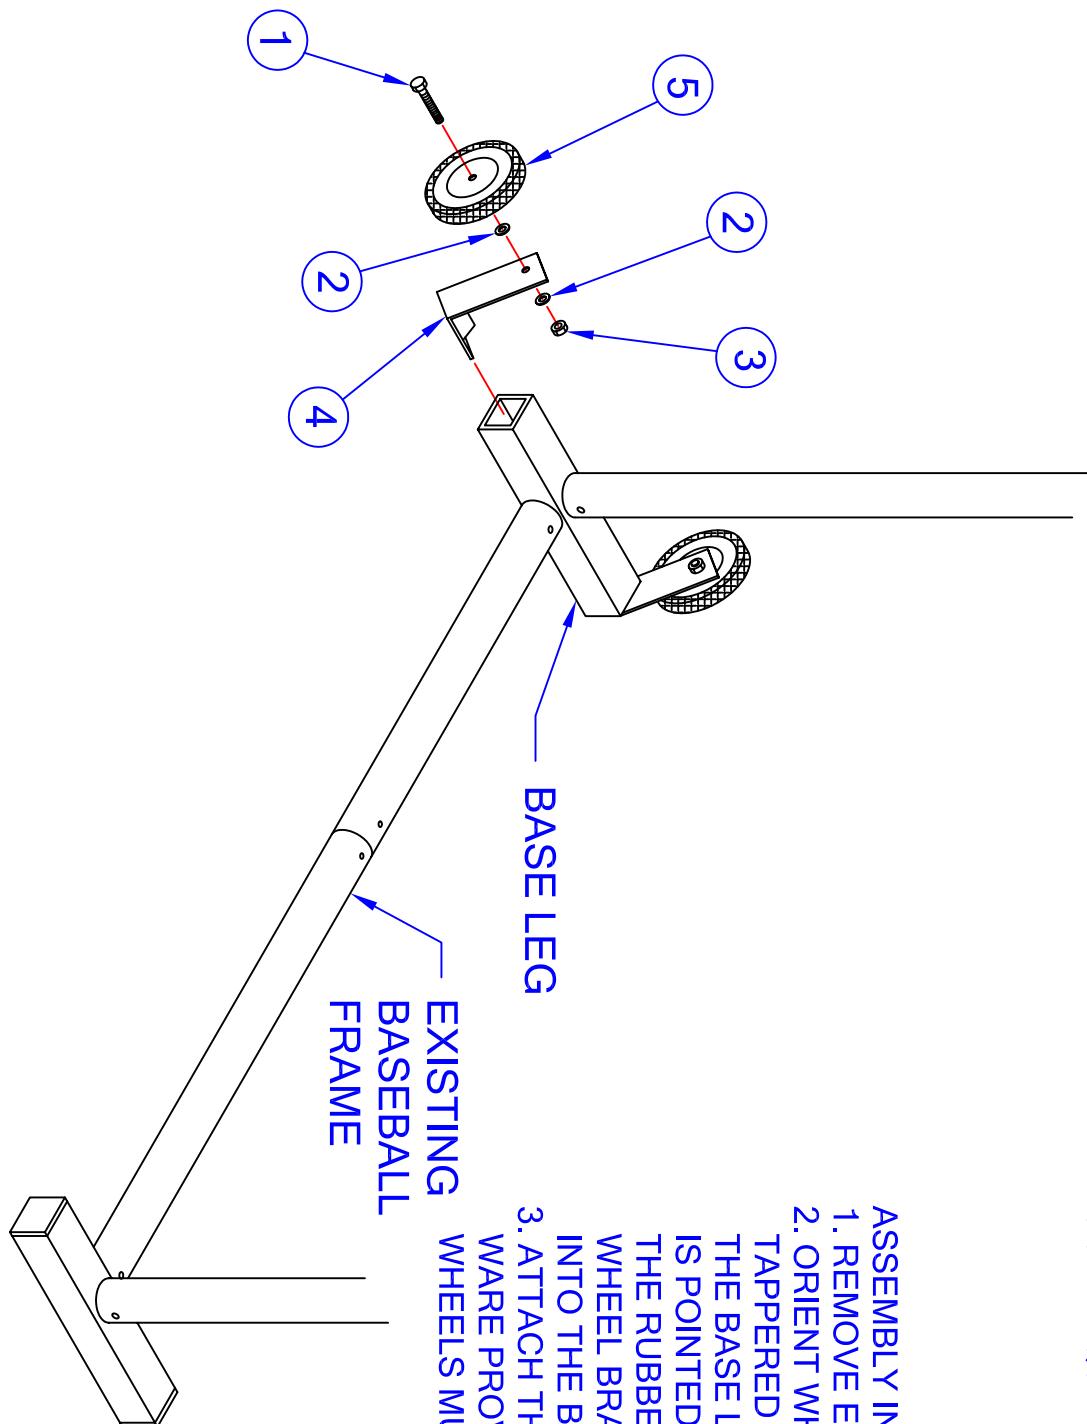

LIST OF MATERIALS			
PIECE NO.	PART NO.	DESCRIPTION	QTY
1	HS2726	HX HD SCRW 1/2"x 2 1/2"	2
2	HW2044	ZP FLAT WASHER 1/2"	4
3	HN5041	LOCK NUT 1/2"	2
4	BBWK21	WHEEL BRACKET	2
5	RW788	WHEEL	2

Jaypro Sports 976 Hartford Turnpike Waterford, CT 06385 USA (800)243-0533 (800)988-3363 Fax www.jaypro.com	MODEL NO.:
	BBWK2
PRODUCT NAME: WHEEL KIT	
DRAWN BY: JAC	EFFECTIVE DATE: 4-3-03