


REV	DESCRIPTION	DATE	BY
A	REVISED FOOTING DETAIL	07/29/10	DRL

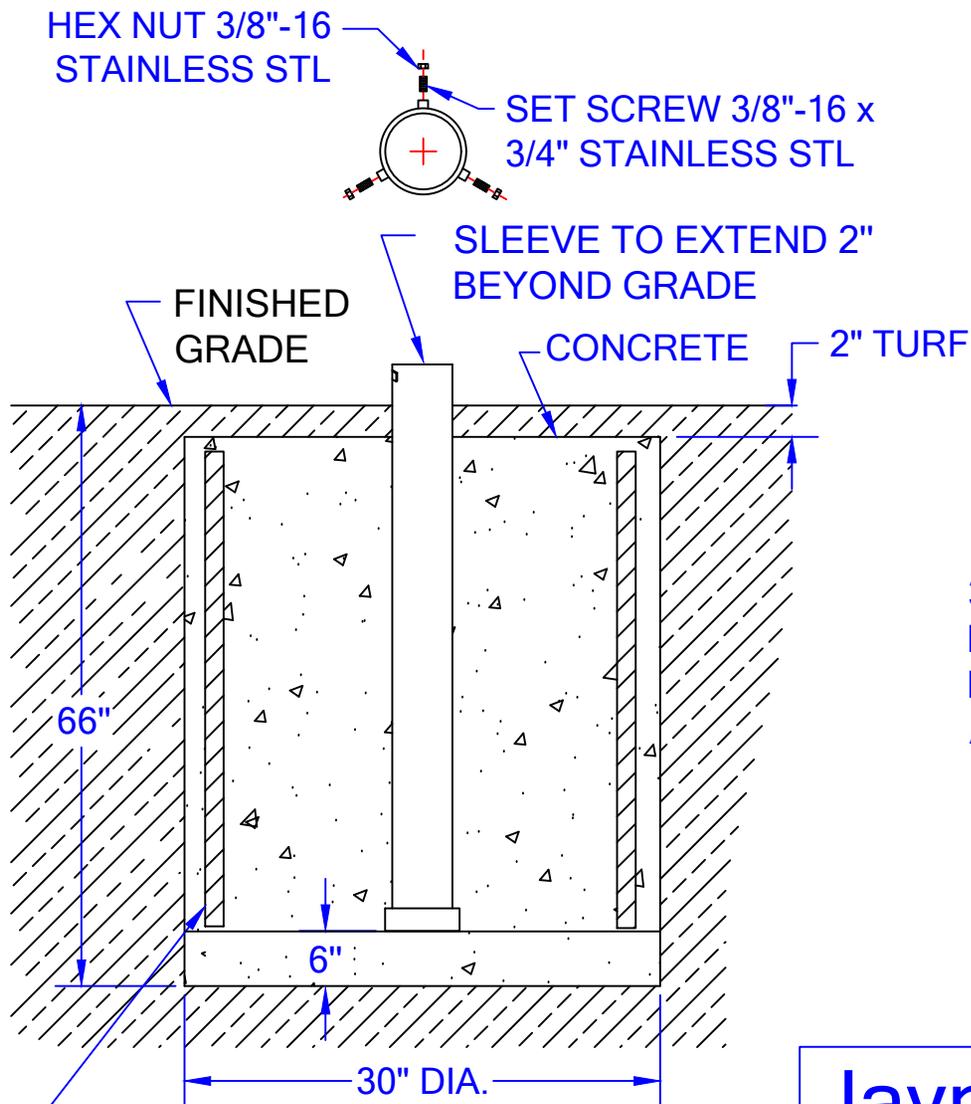

3/4" RE-BAR x 56", 6 PLACES  
PER FOOTING (NOT INCLUDED,  
TO BE PROVIDED BY INSTALLER).  
THESE ARE TYPICAL FOOTING  
DIMENSIONS FOR AVERAGE SOIL  
CONDITIONS.

## GROUND SLEEVE INSTALLATION INSTRUCTIONS

1. DIG FOOTING AT PROPER LOCATION 30 INCHES WIDE x 66 INCHES DEEP.
2. POUR A 6 INCH FOOTING AND ALLOW TO FULLY CURE OR PLACE SLEEVE ON TWO 6 INCH CONCRETE BLOCKS, SEE STEP 3 FOR HEIGHT OF SLEEVE BEFORE POURING FOOTING.
3. SET SLEEVE 2 INCHES ABOVE GRADE SO LOCKING NUTS ARE EXPOSED. PLUMB SLEEVE BEFORE POURING REST OF CONCRETE AND ALLOW THE CONCRETE TO FULLY CURE.
4. CAREFULLY SLIDE FOUL POLE SECTION INTO SLEEVE. ORIENT FOUL POLE PROPERLY AND LOCK INTO POSITION USING FASTENERS PROVIDED.

# Jaypro Sports

976 Hartford Turnpike  
Waterford, CT 06385 USA  
(800)243-0533  
(800)988-3363 Fax  
www.jaypro.com

MODEL NO.:  
**FPS-30C**

PRODUCT NAME:  
30' FOUL POLE SLEEVES

DRAWN BY: JAC EFFECTIVE DATE:  
1-14-04