


# TP278 - FOOTING DETAILS

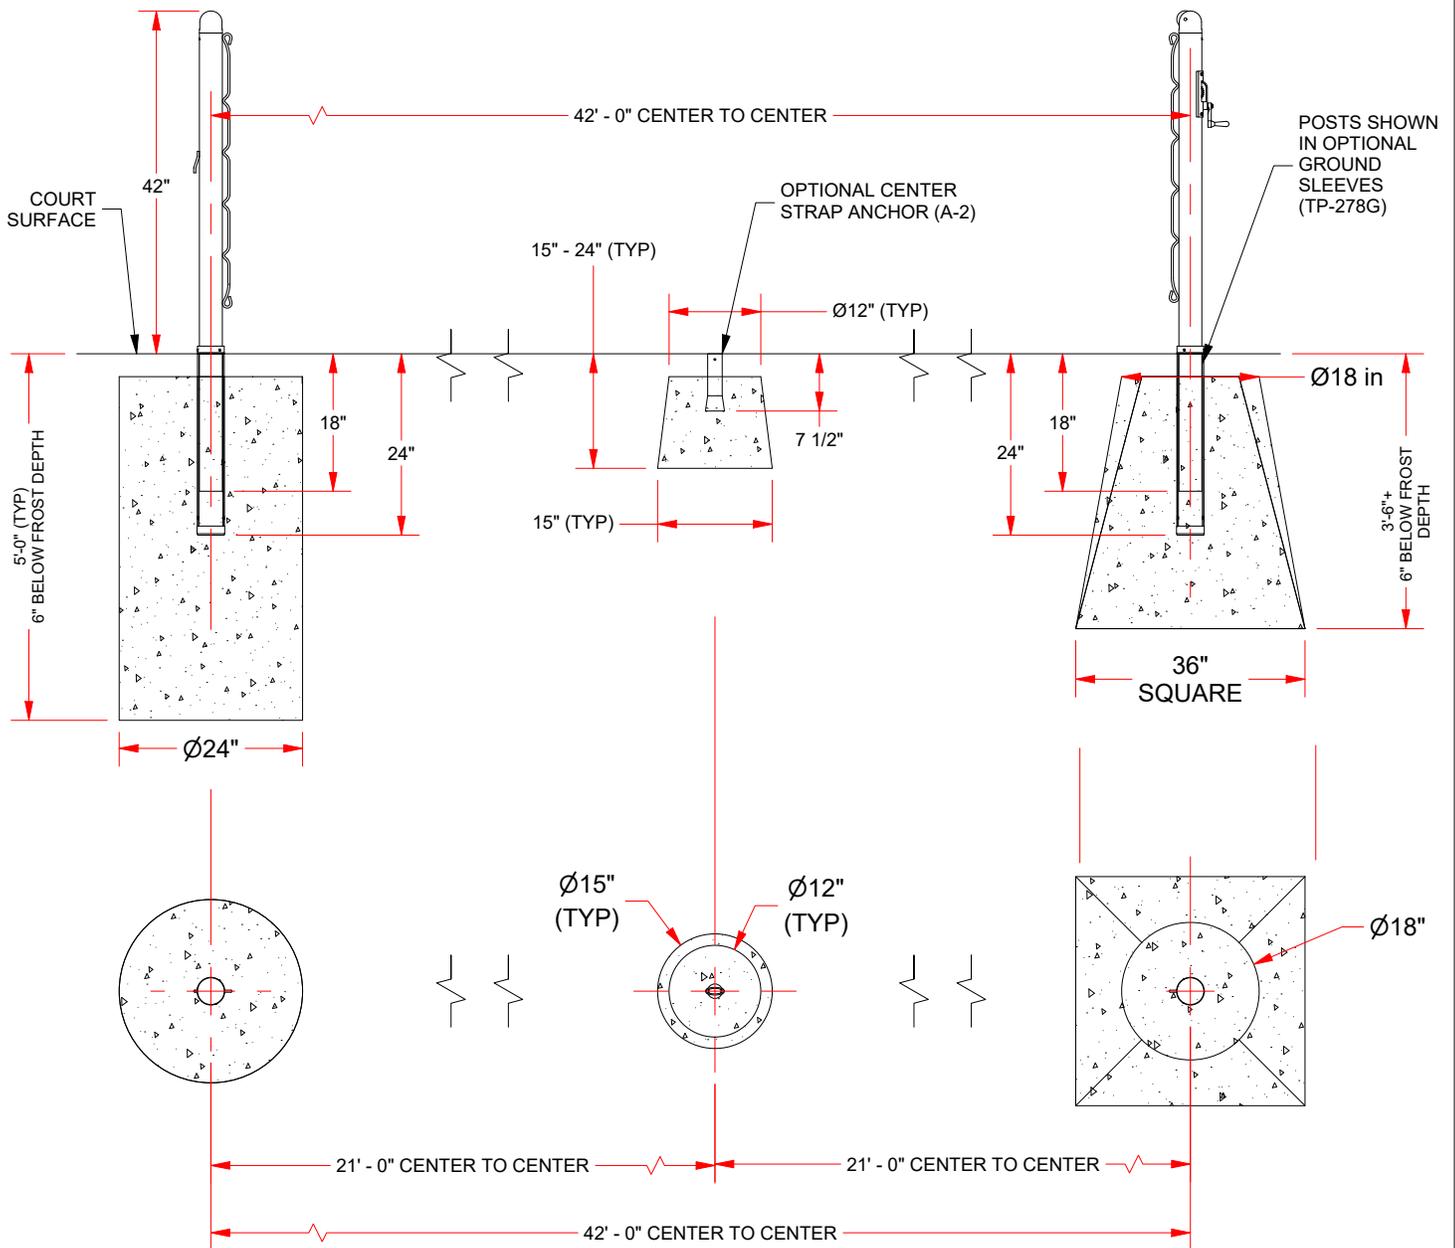

**NOTES:**

- FOOTINGS FOR POSTS MAY BE PYRAMID OR CYLINDER SHAPE.
- FOUNDATION DEPTH AND WIDTH MAY VARY - ABOVE SPECIFICATIONS ARE APPROXIMATE AND FOOTINGS SHOULD BE POURED AS NEEDED FOR LOCAL SOIL AND FROST CONDITIONS.
- CONCRETE SHOULD BE 4000 PSI COMPRESSIVE STRENGTH MINIMUM.
- CURING TIME SHOULD BE 7 DAYS MINIMUM BEFORE PUTTING INTO SERVICE.
- FOR SAFE OPERATION AND CONTINUED HIGH PERFORMANCE FROM THIS EQUIPMENT, INSPECTION AND MAINTENANCE MUST BE PERFORMED BEFORE EACH USE.
- USE OF THIS EQUIPMENT OTHER THAN INTENDED MAY BE HAZARDOUS.
- ALTERATION OR MODIFICATION OF EQUIPMENT MAY BE HAZARDOUS. FOR REPAIR OR REPLACEMENT, PLEASE CALL JAYPRO SPORTS AT 1-800-243-0533.




**TP278**

[www.jayprosports.com](http://www.jayprosports.com) / (800) 243-0533 / 976 Hartford Tpke, Waterford, CT 06385 USA


SUBJECT TO CHANGES IN DESIGN AND MANUFACTURING  
© COPYRIGHT 2022 JAYPRO SPORTS, LLC. ALL RIGHTS RESERVED

# TP278 - COURT LAYOUT AND NET INSTALL

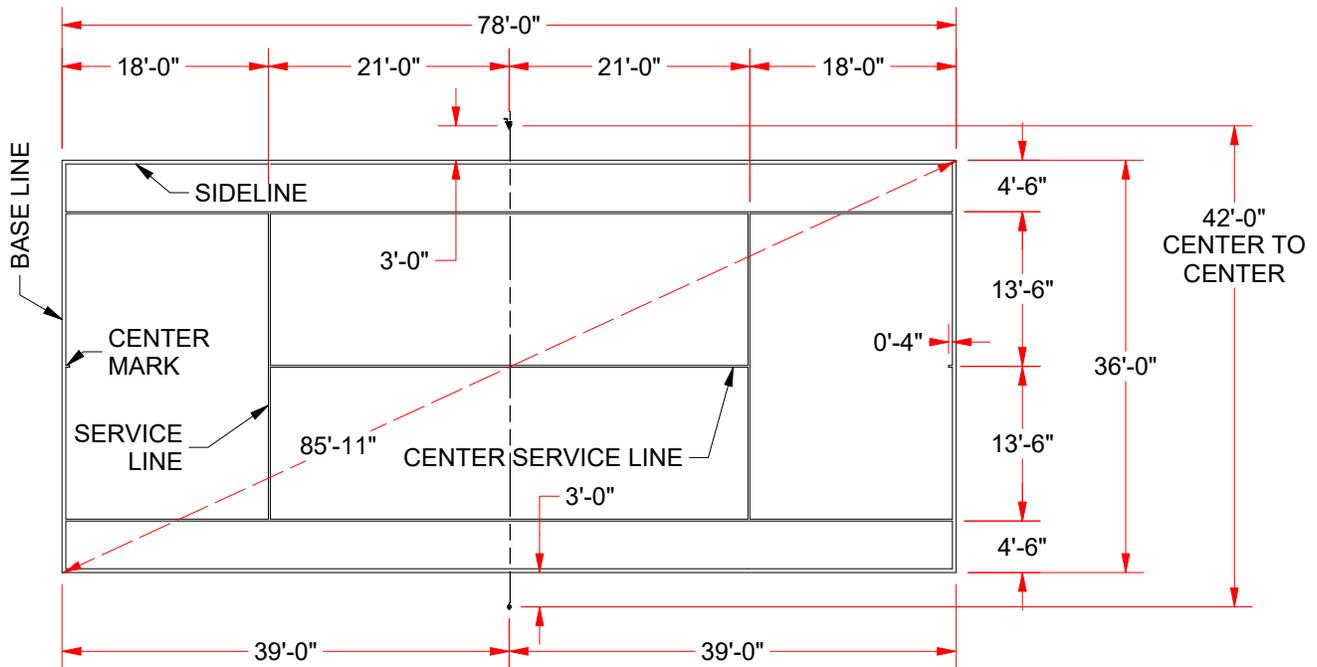

**NOTES:**

- ALL DIMENSIONS ARE TO OUTSIDE EDGE OF LINES.
- CENTER SERVICE LINE & CENTER MARK SHALL BE 2 INCHES WIDE.
- OTHER LINES SHALL BE BETWEEN 1" AND 2" WIDE, EXCEPT THE BASELINES MAY BE UP TO 4" WIDE.

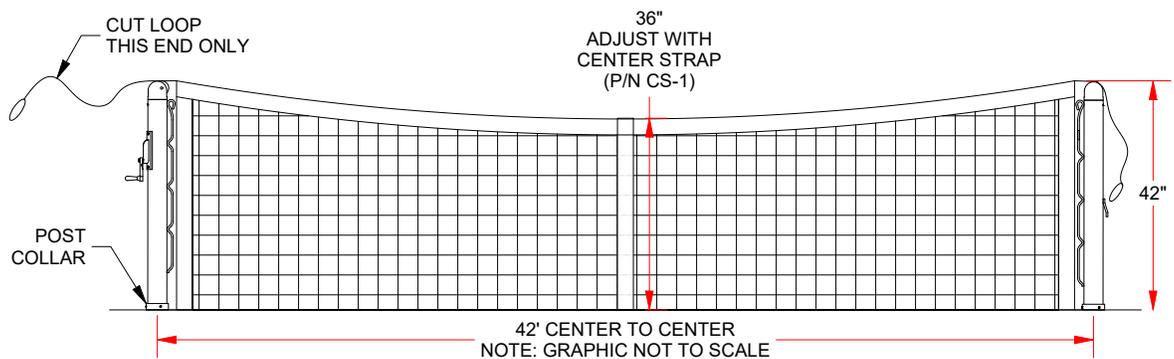

**NET INSTALLATION:**

1. ADJUST HEIGHT OF POSTS TO 42" WITH POST COLLARS.
2. CUT OFF LOOP AT ONE END OF TOP NET CABLE AND INSERT INSIDE THE WINCH POST, AS SHOWN.
3. GUIDE CABLE INTO WINCH HOUSING AND INSERT THROUGH HOLE IN THE WINCH WHEEL.
4. ENSURE PULLEY WHEEL/CABLE TRACK AT TOP OF EACH POST IS IN LINE WITH NET CABLE.
5. ATTACH LOOP ON OTHER END OF NET CABLE TO HOOK ON OUTSIDE OF STATIC POST.
6. TURNING THE HANDLE COUNTER-CLOCKWISE, TIGHTEN CABLE SO CENTER OF NET IS APPROXIMATELY 39". DO NOT OVER TIGHTEN.
7. CENTER NET AND TIE OFF HEAD BAND ROPES AROUND EACH POST.
8. LACE NET SIDE BANDS TO POSTS USING BLACK LACING CORD THROUGH GROMMETS AND NET RAILS ON SIDES OF POSTS.
9. IF USING CENTER STRAP (CS-1) ADJUST HEIGHT AT CENTER TO 36".