


PORTABLE PICKLEBALL NET SYSTEM

ASSEMBLY INSTRUCTIONS AND OWNER'S MANUAL

1-800-621-0146

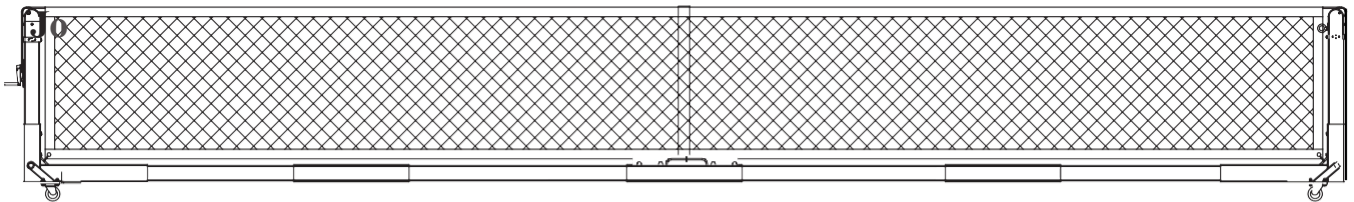


Thank you for purchasing our portable pickleball net system, we try hard to ensure that our products are of high quality and free of manufacturing defects or missing parts. However, if you have any questions with your portable pickleball net system please visit Putterman Athletics Website at <https://www.puttermanathletics.com/> or call 1-800-621-0146 for service.


Read this manual all the way through before starting assembly of this portable pickleball net system then read each step completely before beginning installation.

PARTS LIST


REF	DESCRIPTION	QTY
A	Base Frame	2
B	Stabalizer Flat Legs	2
C	End Wheel Set	2
D	Left Connecting Pipe and Right Connecting Pipe	2
E	Middle Connecting Pipes	1
F	Connecting Coupler (with a hook for hanging the center strap)	2
G	Connecting Sleeve	1
H	Left Pickleball Post	1
	Right Pickleball Post	

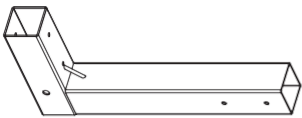


A

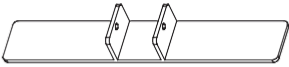


B

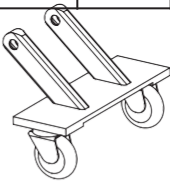


C

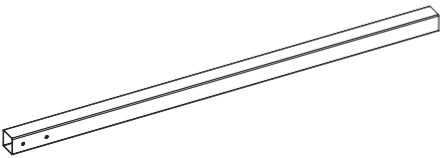


D

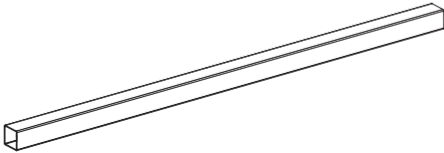


E

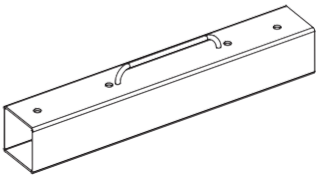


F

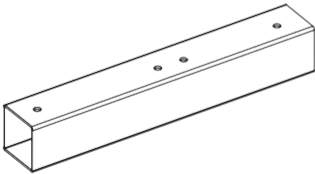

G

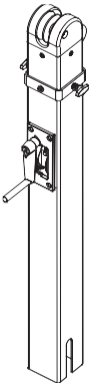

H

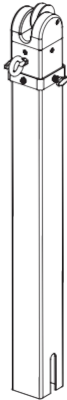


I

REQUIRED FOR THIS PAGE :




Dual-use Wrench

$\frac{1}{2}$ " x $\frac{3}{8}$ " Set Screws





$\frac{1}{2}$ " x 5- $\frac{1}{8}$ " Hex Bolts

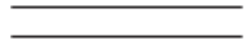

$\frac{5}{8}$ " x 6- $\frac{5}{16}$ " Hex Bolts


STEPJ

Put the Base Frame (A) on the Stabalizer Flat Legs (B), then fix them with $\frac{1}{2}$ " x $\frac{3}{8}$ " Ser Screws as shown.

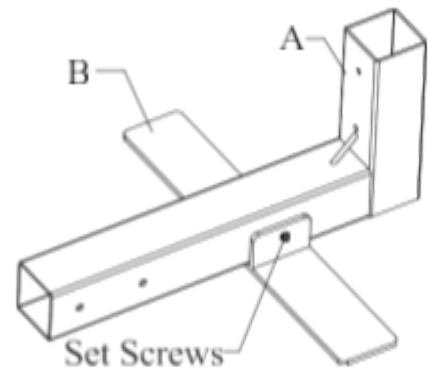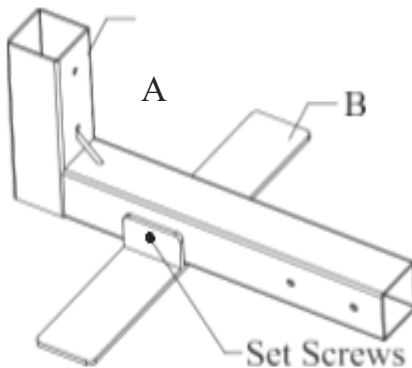


STEP2

Attach the End Wheel Set (C) to the Base Frame (A) with $\frac{5}{8}$ " x 6- $\frac{5}{16}$ " Hex Bolts as shown.

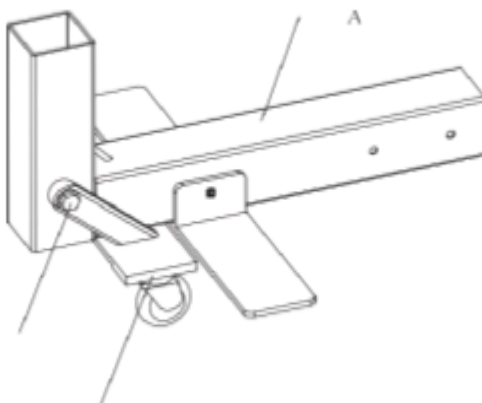


Hex Bolt

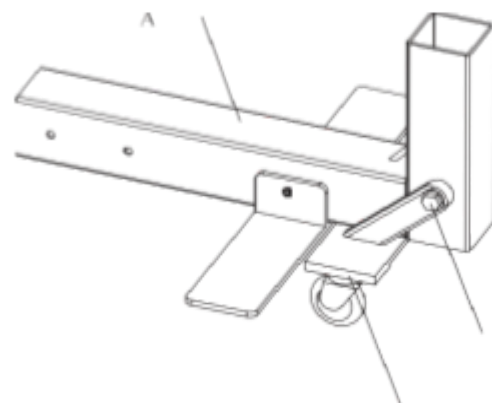


Hex Bolt

REQUIRED FOR THIS PAGE:

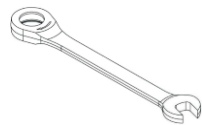

Dual-use Wrench

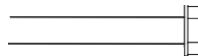


$\frac{1}{2}$ " x 4-5/16" Hex Bolts

$\frac{1}{2}$ " x $\frac{3}{8}$ " Set Screws


STEP3

Slide the Left Connecting Pipe (D) into the Base Frame (A), then tighten them up with $\frac{1}{2}$ " x 4-5/16" Hex Bolts as shown.

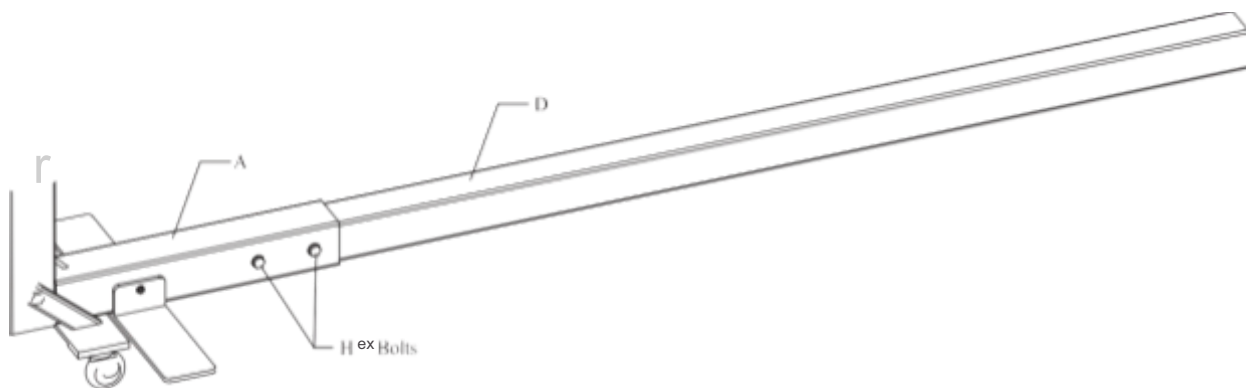

STEP4

Connect the Left Connecting Pipe (D) and the Middle Connecting Pipe (E) with the Connecting Sleeve (G), then fix them with $\frac{1}{2}$ " x $\frac{3}{8}$ " Set Screws as shown.

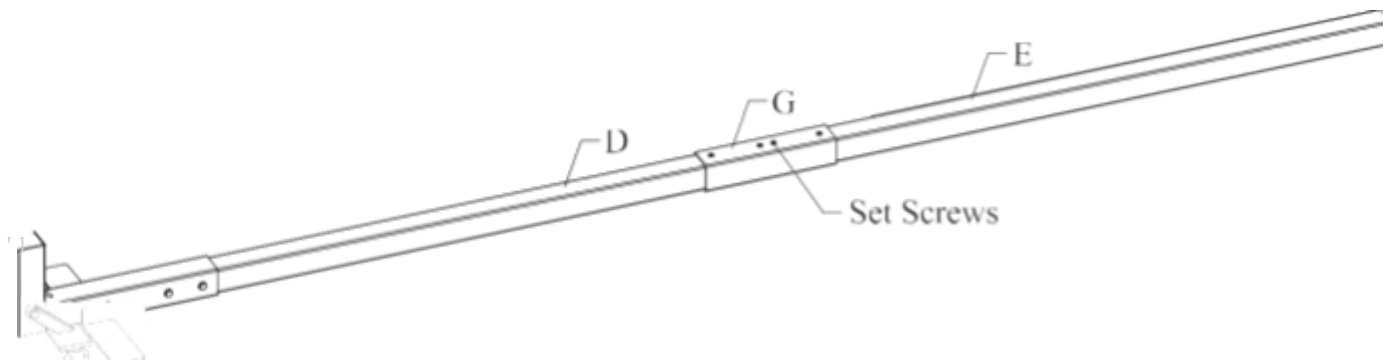


REQUIRED FOR THIS PAGE:



ADJUSTABLE
WRENCH



Allen Key

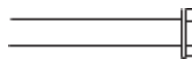


$\frac{1}{2}$ " x 4-5/16" Hex Bolts

$\frac{1}{2}$ " x $\frac{3}{8}$ " Set Screws


STEPS

Connect the Middle Connecting Pipe (E) and the other Middle Connecting Pipe (E) with Connecting Coupler (F), then use $\frac{1}{2}$ " x $\frac{3}{8}$ " Set Screws to fix them up as shown.


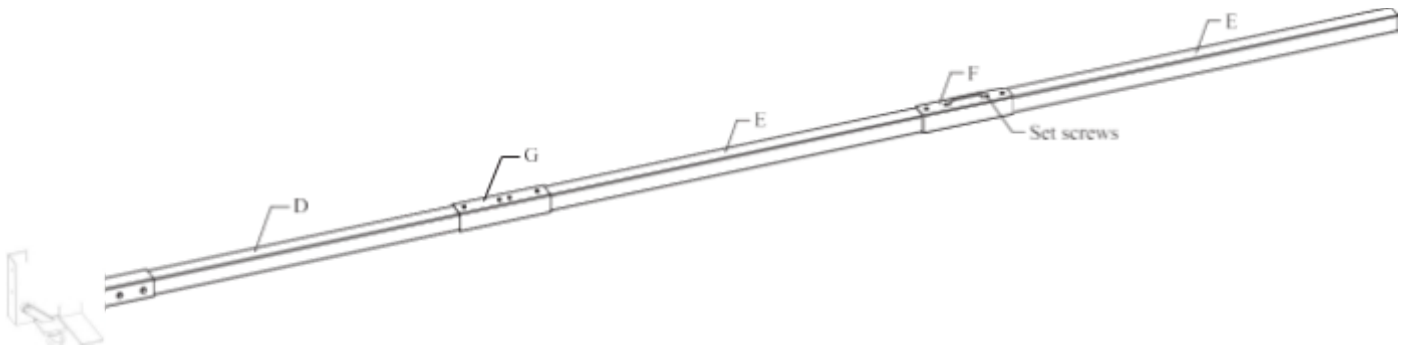


STEP6

Connect the Right Connecting Pipe (D) with the Middle Connecting Pipe (E) with Connecting Sleeve (G), use $\frac{1}{2}$ " x $\frac{3}{8}$ " Set Screws to fix them up as shown. Then attach the Based Frame (A) to the Right Connecting Pipe (D), then use $\frac{1}{2}$ " x $\frac{4-5}{16}$ " Hex Bolts to tighten them up as shown.

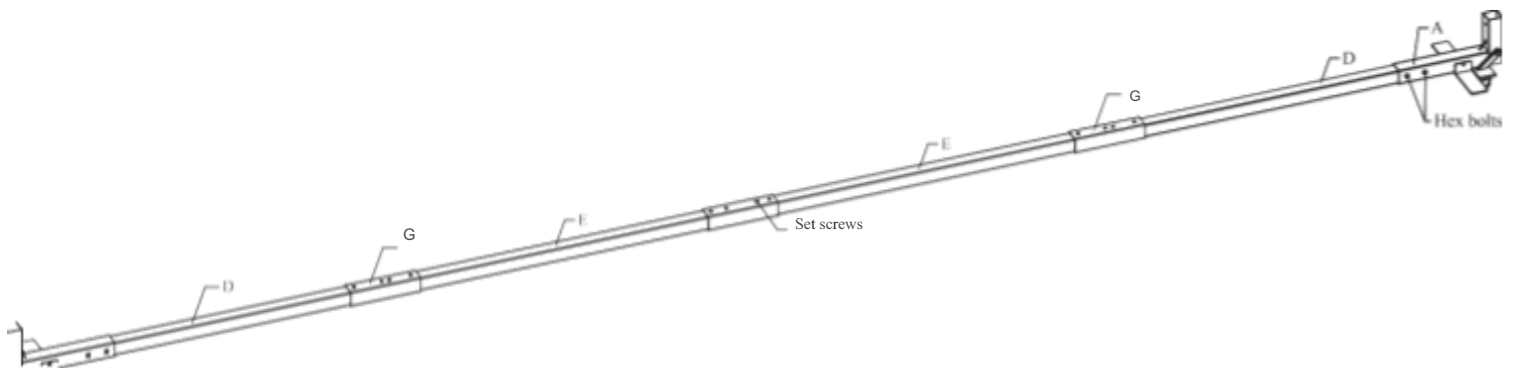


REQUIRED FOR THIS PAGE:

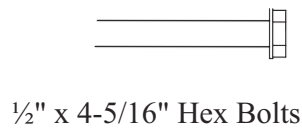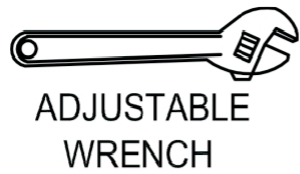


STEP 7

Fix the collar in position with set screws and handles, then attach the hook to the post as shown. Then repeat this process to install the other post as shown.

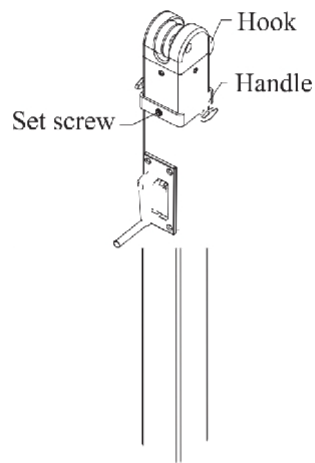


Hook { , : / Handle

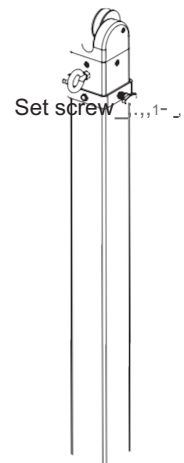

STEPS

Please dismantle the winch with a screwdriver then add some grease to the gear and ratchets as shown, which could help the gear mechanism work smoothly.

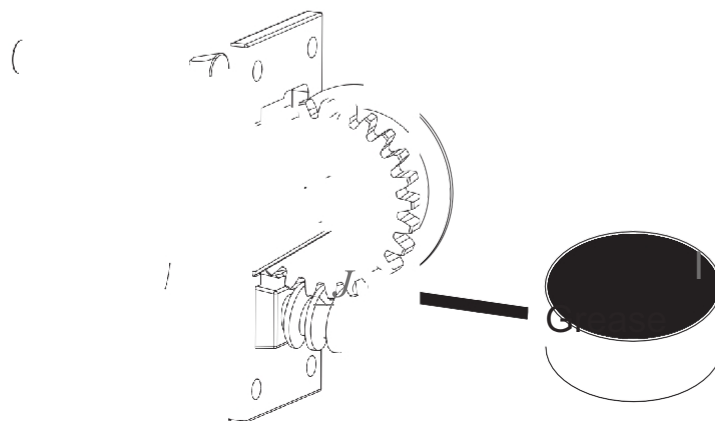

REQUIRED FOR THIS PAGE:



Tap





Allen Key



1/2" x 3/8" Set Screws


STEP 9

Slide the Left Pickleball Post (H) into the Base Frame (A), then use 1/2" x 3/8" Set Screws to tighten the post in place. Then repeat this process to install the other Right Pickleball Post (I) as shown.

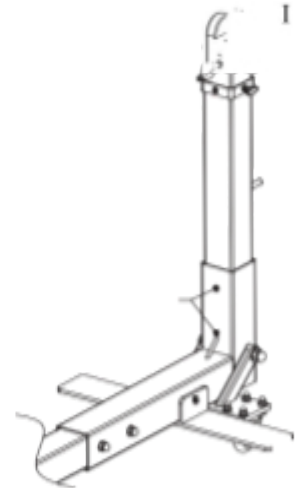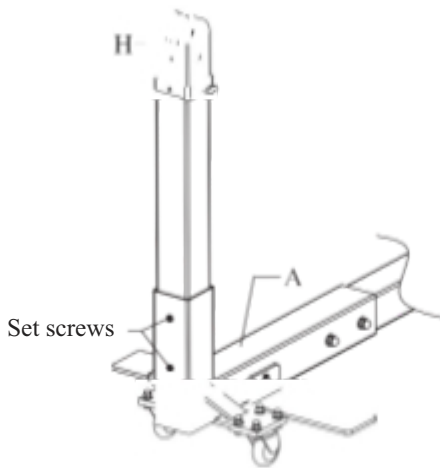

STEP 10

Make sure the net cable is 23.8" long from the pulley as shown, then crank the net to a standard height.(36" high on both uprights, 34" high in the middle).

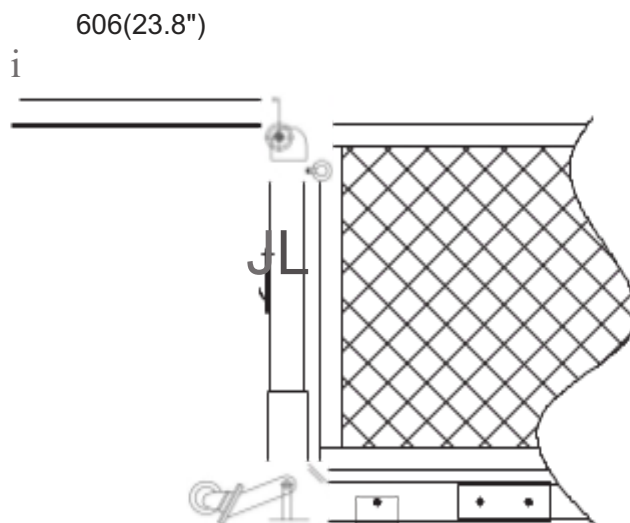

REQUIRED FOR THIS PAGE:




Tap

STEP 11

Install the net to the pickle ball system as shown.

- *Do not leave the net cable overlong, otherwise the worm will not have enough room to wind up the net cable.
- *Do not overtighten the net!

The portable pickle ball net system has been installed successfully. Enjoy your game!

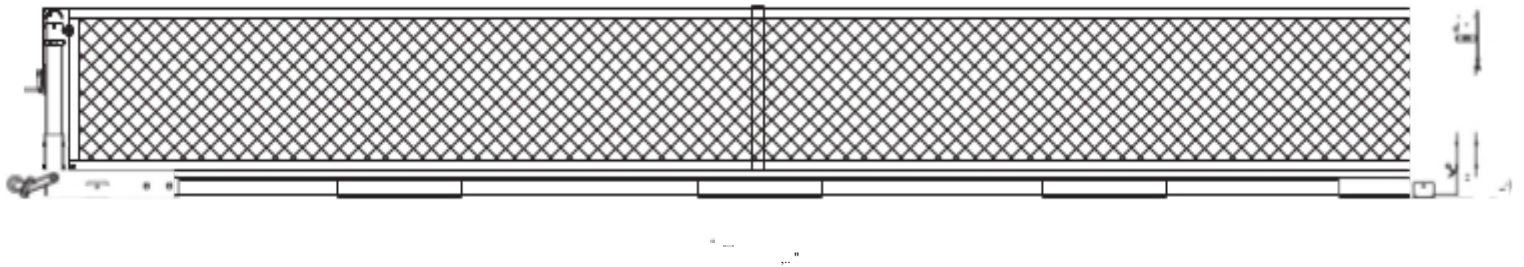

MAINTAIN CE

Add some grease to the gear and ratchets regularly.

